

EXPORT DATA FROM JUMO AQUIS TOUCH S DEVICE

1. LOCATE THE JUMO DEVICE



2. LOG IN AS MASTER:

Check the left bottom of the JUMO screen:

- If you see “Master” under the date, you're already logged in—skip to Step 3.
- If not, click this button:



From the “Device menu”, select “**Logon/logoff**” option. Click “Logon”, ensure “ID Input” is set to Master, and press “Ok”. Enter the password: **9200**.

You are now logged in as Master.

3. EXPORT THE DATA

- 1) Insert the USB stick into the USB port on the bottom-right side
- 2) The **Memory manager** menu will appear. Choose one of the following:
 - Recorder update → USB: Exports only new (not yet retrieved) data.
 - Recorder backup → USB: Exports all recorded data, including previously retrieved data.

Unless instructed otherwise, select **Recorder update** → **USB**.

- 3) Wait for the export to complete.
- 4) When finished, click “Secure hardware remove”, then safely unplug the USB.

4. INSTALL JUMO PCA3000 SOFTWARE


Download from:

https://www.jumo.net/zpv/software/softwaredownload?filename=177_178u.exe&id=1489

Then follow the installation instructions.


5. IMPORT DATA INTO JUMO PCA3000

- 1) Plug the USB into your computer.
- 2) Locate the exported files (file types are .DAT and .SET)
- 3) Open the JUMO PCA3000 software
- 4) Go to Archive > Read in data

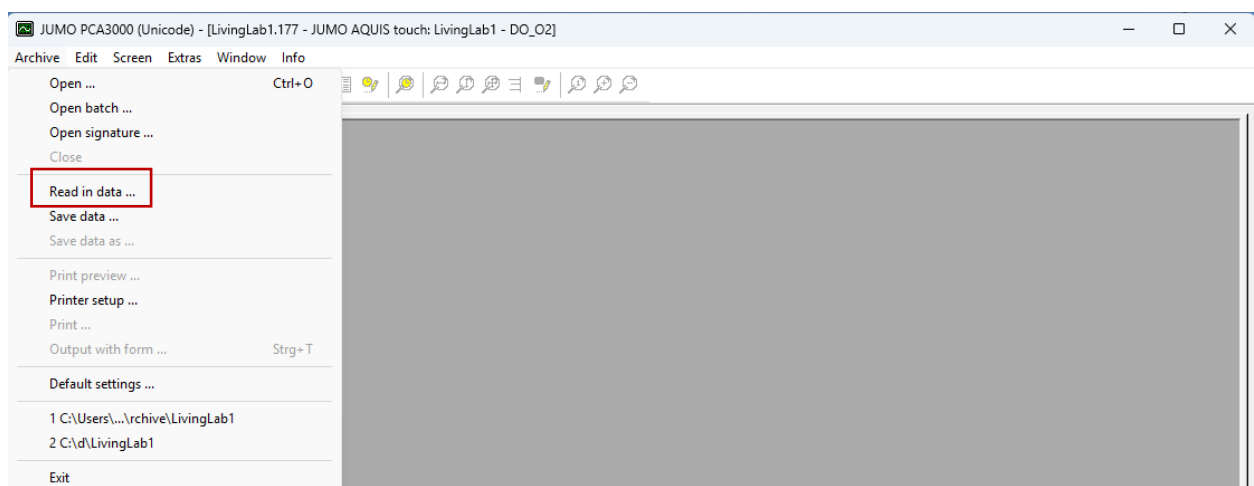


5) In the window:


1. Set the “Folder for data source” (location of .dat and .set files)
2. Set the target archive folder
3. Ensure the data in “Data selection” is checked and click “Read In”

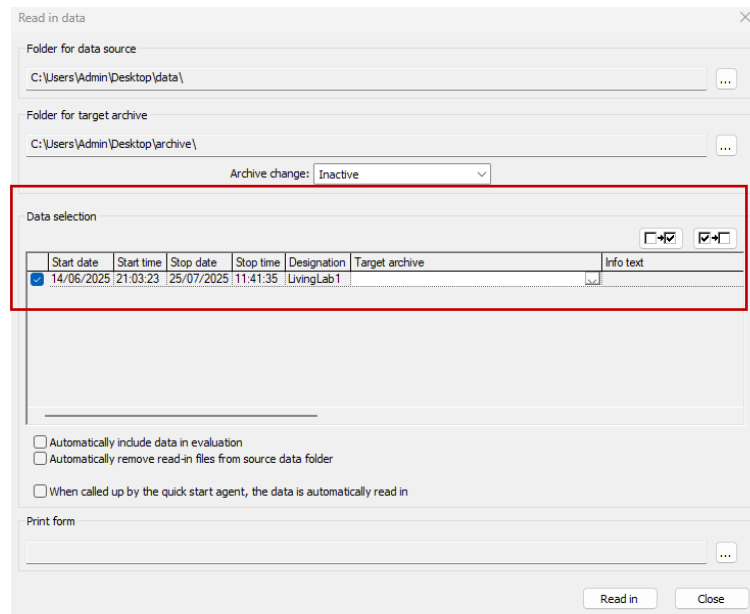

6) If archive doesn't exist yet, this window will show up. Enter the archive name (e.g. LivingLab1) and press “Ok”.

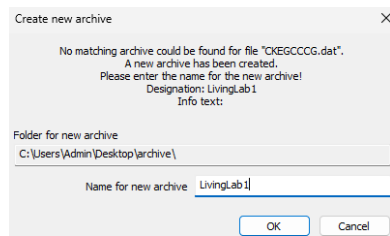


7) Click “Open” and wait for the data to load.

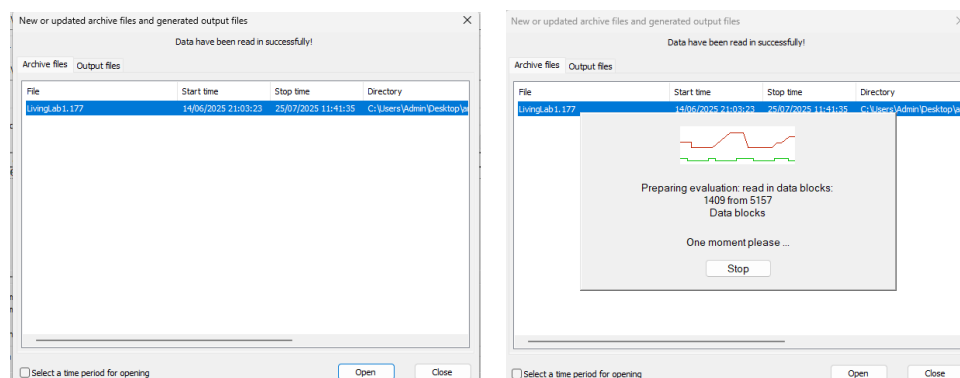


8) Once loaded, close the popup windows.

6. EXPORT TO .TXT FILE

- 1) Go to the “Analog” tab
- 2) Right-click the data table → Export > Text file

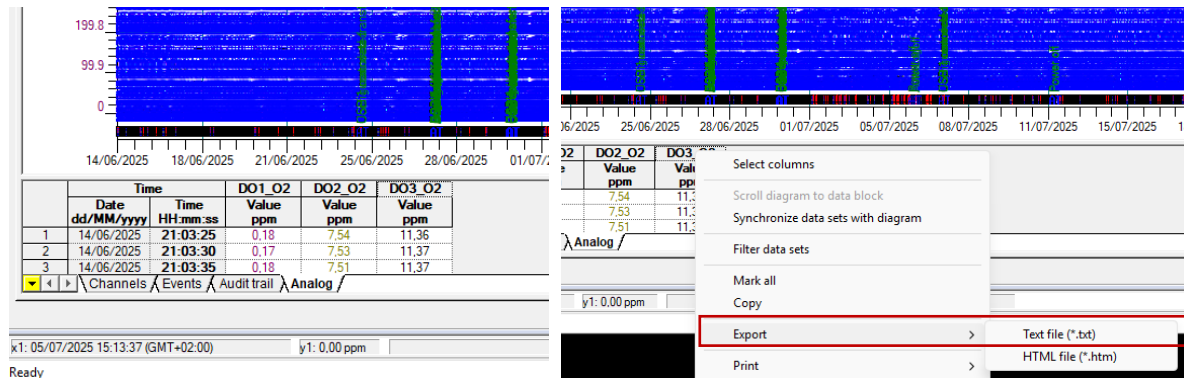


- 3) Use the following settings:

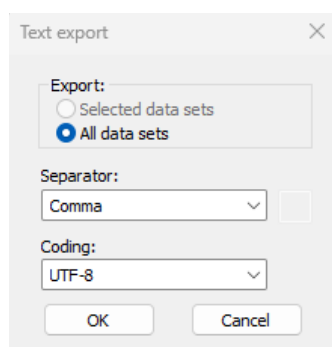

- 4) Click “Ok”, choose a save location, and wait for export completion

7. EXPORT OTHER GROUPS

- 1) Go to Archive > Open further group
- 2) Select the group that hasn't been exported yet (e.g. DO_Temp)
- 3) Click Open
- 4) You will see a new table – repeat Step 6 for each group.

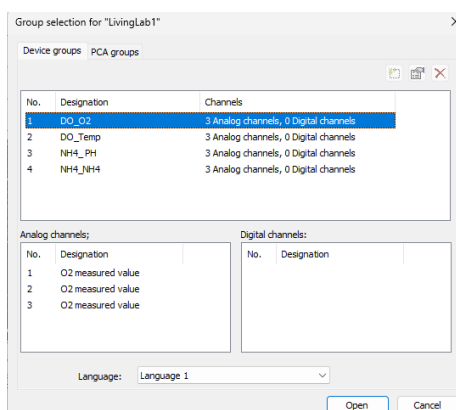


UPLOAD DATA TO GEMMA FUSION PLATFORM

1. Sign in

Go to <https://fusion.gemma.feri.um.si/gf-test/mgmt/> and log in with your credentials.

2. Open the workspace

Click the **Workspaces** tab and select **Living Lab 1 Data Collection** from the list.

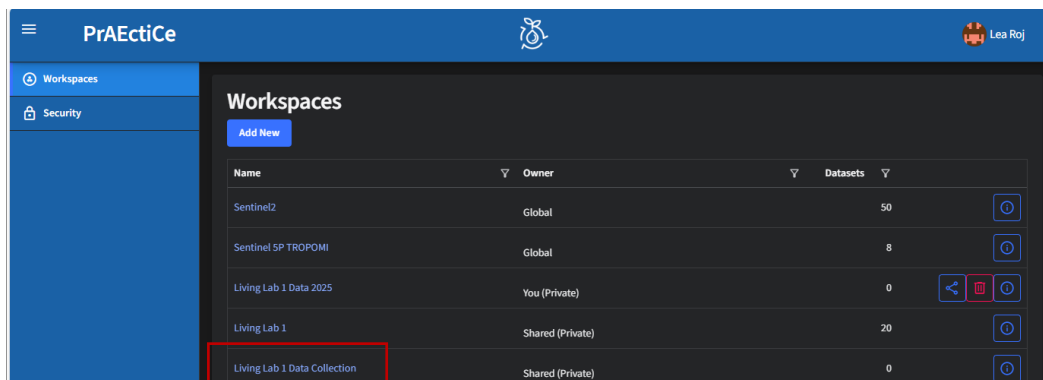


3. Navigate to the correct folder

Click the **Files** tab, then locate and select the folder named **JUMO_Aquis_Touch**.

4. Upload your files

Click the **Upload** button at the top. In the pop-up window:

- Drag your files into the box, or
- Click **Choose Files** and select your data from your computer.

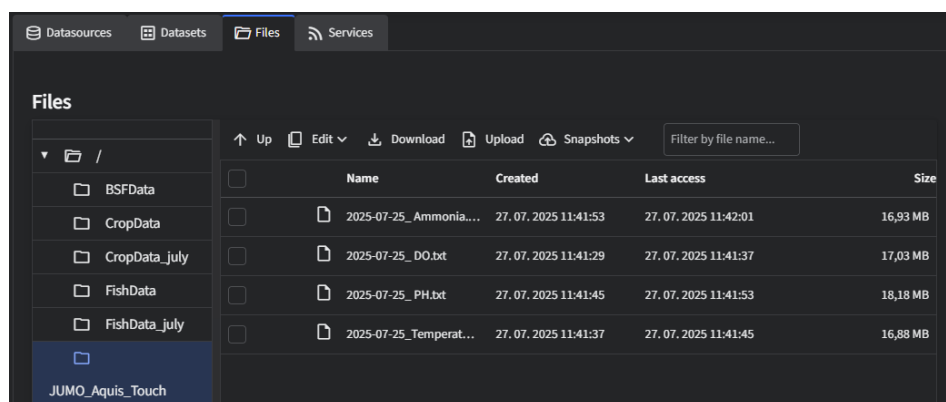

5. Wait for confirmation

Once the upload finishes, your files will appear in the list.